



Timer Controller Box



Professional Panther

TIMER CONTROLLER PROCEDURE

The **Remote Function Key** shown in the yellow circle allows you to connect an Optional Timer Control Box so you may set a **repeating Ozone cycle**.


The Professional Panther comes with two detachable cables:

- (1) A cable with Ecozone standard plug for connecting the Panther to the RCT24 socket when the RCT24 is being used as a source of power to the Panther.
- (2) A cable with a EU, UK or US plug for a direct connection of Panther to the electricity Mains when the Mains is being used as a source of power to the Panther.

SETTING OZONE TIME CYCLE

The minimum time interval which can be set on the RCT24 timer is 30 minutes.

The minimum time interval which can be set on the Professional Panther timer (i.e.: ozone generation ON time) is 1 minute. Thus, the minimum cycle time is 30 minutes of which Ozone will be generated for 1 minute.

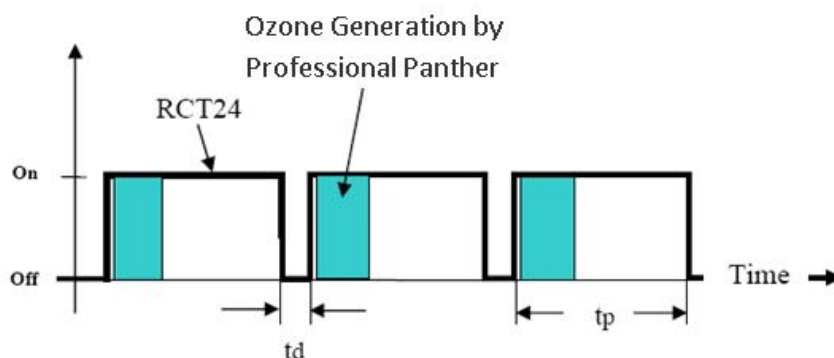

Some examples:

1. Set the RCT24 to ____ min and the Panther to ____ min. Ozone will be generated for ____ min every ____ min.
2. Set the RCT24 to ____ min and the Panther to ____ min. Ozone will be generated for ____ min every ____ min.
3. Set the RCT24 to ____ min and the Panther to ____ min. Ozone will be generated for ____ min every ____ min.