



Product code

DAD001, DAD002, DAD005


Description

Daddi Long Legs®

- Installation guide
- Guide d'installation
- Installationsanleitung
- Manuale per l'installazione
- Instrukcja dotycząca instalacji
- Guía de instalación
- Installatie handleiding


P+L Systems' technical support is based on our extensive experience in proofing installations against pest birds, not on engineering expertise. Therefore, it is not possible for us to offer a fully qualified engineering recommendation. If you need assurance on integrity of installation design we recommend you seek the guidance of specialist materials consultants/structural engineers.

V300513

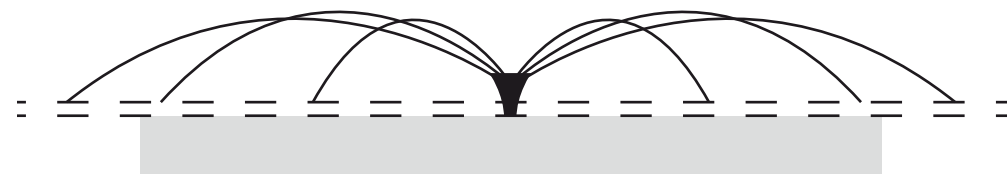


Please read these instructions carefully and store in a safe place for future reference.


Make sure the rods of the Daddi Long Legs extend past the edge of the mounting surface.

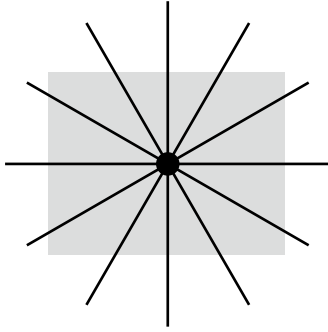

On larger platforms, the rods must intersect one another for complete coverage.

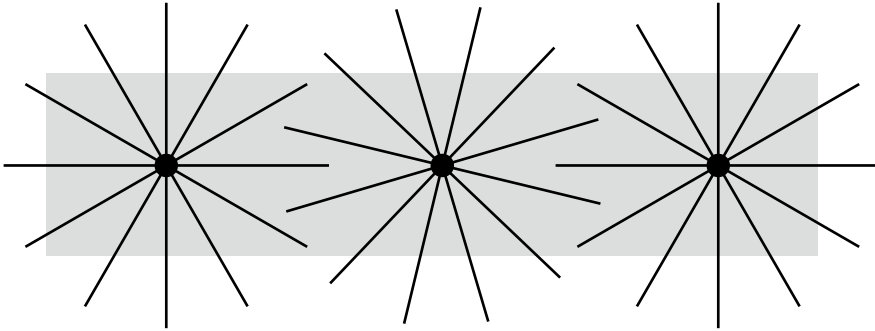

From the side view, the tips of the rods should be no more than 50mm above the platform.

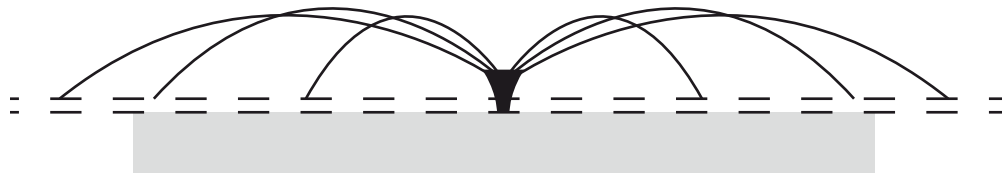

Installation Using Screws (Not supplied)

1. Make sure you will not damage any substrate equipment when drilling holes through it. Air conditioners and lights often have sensitive equipment near the surface. Look inside before drilling.
 2. Drill pilot holes through the three holes in the base of the Daddi Long Legs.
 3. Peel the paper off the adhesive gasket.
 4. Using a cordless screwdriver, drive self tapping screws through the three holes in the base.
- Note: Do not use the adhesive gasket to secure the unit in place. The gasket is provided only to keep water from entering through the screw holes.

Installation Using Avifix (ADH006)

The slippery Delrin base of the Daddi Long Legs cannot be glued. You must use an intermediate stick-on-base (available from Network - DAD005)

1. Make sure the mounting surface is clean and dry, and free of droppings, dust, peeling paint, rust, etc.
2. Screw the Daddi Long Legs base to the top of the stick-on base using the screws provided. (The top of the stick-on base is the side where the screw holes are larger).
3. Apply a zig-zag pattern of Avifix to the bottom of the base and press in place. Move the base whilst pressing down to achieve a layer of Avifix maximum 1mm thick.

Removing the Spindle:

The top part (which contains the twelve rods) can be removed from the base by pulling it upwards. When putting it back together, make sure the lock-disk is forced back up inside the top part with a screwdriver or similar.